

Manufacturer Part Number	Manufacturer	Description	Dynacon Replacement (D) = Direct (F) = Functional
CD-1D	Kele	Duct CO2 Sensor	M310eRD (F)
CD-1D-LED	Kele	Duct CO2 Sensor	M310eRLD (F)
CD-1W	Kele	Space CO2 Sensor	M310eR (F)
CD-1W-LED	Kele	Space CO2 Sensor	M310eRL (F)
CD-AD	Kele	Duct CO2 Sensor	M310eD (D)
CD-AD-LCD	Kele	Duct CO2 Sensor	M310eLD (D)
CD-AD-R	Kele	Duct CO2 Sensor	M310eRD (D)
CD-AD-R-LCD	Kele	Duct CO2 Sensor	M310eRLD (D)
CD-AW	Kele	Space CO2 Sensor	M310e (D)
CD-AW-LCD	Kele	Space CO2 Sensor	M310eL (D)
CD-AW-R	Kele	Space CO2 Sensor	M310eR (D)
CD-AW-R-LCD	Kele	Space CO2 Sensor	M310eRL (D)
CS1150A	Kele	Current Operated Switch	CT-810 (F)
CS1150A-LED	Kele	Current Operated Switch	CT-810 (F)
CS1A	Kele	Current Operated Switch	CT-800 (F)
KHD2	Kele	Duct Humidity Transmitter	HU-224-2-MA (F)
KHD3	Kele	Duct Humidity Transmitter	HU-224-3-MA (F)
KHO2	Kele	OSA Humidity Transmitter	HU-224-2-MA (F)
KHO3	Kele	OSA Humidity Transmitter	HU-224-3-MA (F)
KHR2	Kele	Space Humidity Transmitter	HU-225-2-MA (F)
KHR3	Kele	Space Humidity Transmitter	HU-225-3-MA (F)
SCS1.5A	Kele	Current Operated Switch	CT-805 (F)
SCS1150A	Kele	Current Operated Switch	CT-815 (F)
SCS1150A-LED	Kele	Current Operated Switch	CT-815 (F)
ST-A◇	Kele	Duct Temperature Sensor	TE-701-D-◇-C (F)
ST-D◇	Kele	Duct Temperature Sensor	TE-701-B-◇-C (F)
ST-D◇-XH	Kele	Duct Temperature Sensor	TE-702-B-◇-C (F)
ST-FX-◇-12	Kele	Duct Averaging Temp. Sensor	TE-705-B-◇-B-1 (D)
ST-FZ-◇-25	Kele	Duct Averaging Temp. Sensor	TE-705-B-◇-C-1 (D)
ST-FZ-◇-8	Kele	Duct Averaging Temp. Sensor	TE-705-B-◇-A-1 (F)
ST-O◇	Kele	Space Temperature Sensor	TE-205-F-◇ (F)
ST-R◇S	Kele	Strap-On Temperature Sensor	TE-704-A-◇ (D)
ST-S◇	Kele	Space Temperature Sensor	TE-205-P-◇ (D)
ST-S◇E	Kele	Space Temperature Sensor	TE-205-EX-◇-0 (D)
ST-S◇E-XA	Kele	Space Temperature Sensor	TE-205-EX-◇-4 (D)
ST-S◇E-XJ2	Kele	Space Temperature Sensor	TE-205-EX-◇-6 (D)
ST-S◇E-XM	Kele	Space Temperature Sensor	TE-205-EX-◇-1 (D)
ST-S◇P	Kele	Space Temperature Sensor	TE-205-M-◇ (D)
ST-U◇	Kele	Duct Temperature Sensor	TE-702-A-◇-A (F)
ST-U◇	Kele	Immersion Temperature Sensor	TE-703-B-◇-A-1 (D)
ST-U◇B (Includes WEL-B)	Kele	Immersion Temperature Sensor	TE-703-B-◇-A-2 + A-500-1-B-1 (D)
ST-U◇O	Kele	Space Temperature Sensor	TE-205-F-◇ (F)
ST-U◇S (Includes WEL-S)	Kele	Immersion Temperature Sensor	TE-703-B-◇-A-2 + A-500-1-B-2 (D)
UCP-422	Kele	E/P Transducer	XEC-3001 (F)
UCP-422-F	Kele	E/P Transducer	XEC-3001 (F)
UCP-422-M	Kele	E/P Transducer	XEC-3004 (F)